



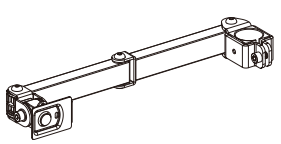


A (x1)

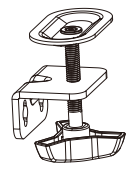


B (x1)




C (x1)



D (x1)




E (x1)



F (x1)



G (x1)



H (x2)



I (x1)
M5x16



J (x1)
M10x20



K (x3)
M6x10



L (x1)
4mm



M (x1)
6mm



M-A (x4)
M4x12




M-B (x4)
M5x12




M-C (x4)
D5

1

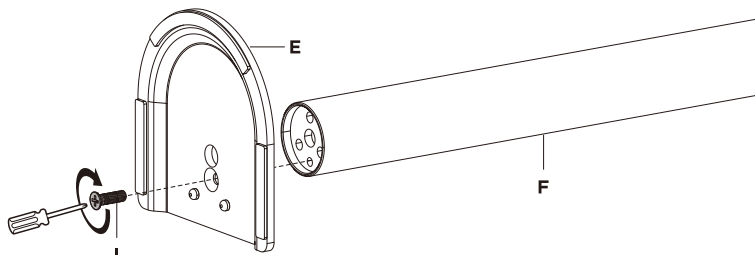


2 Clamp Mounting

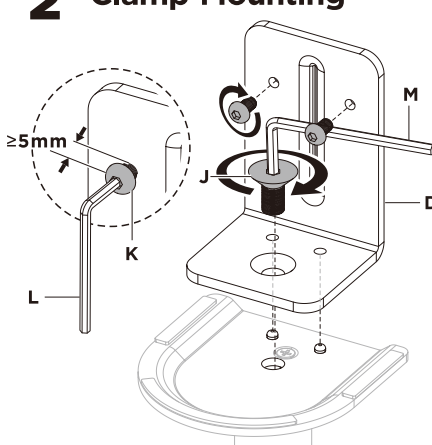


≥5mm

Grommet Mounting

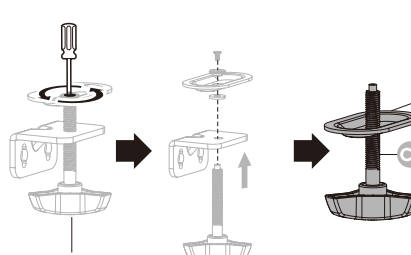

C

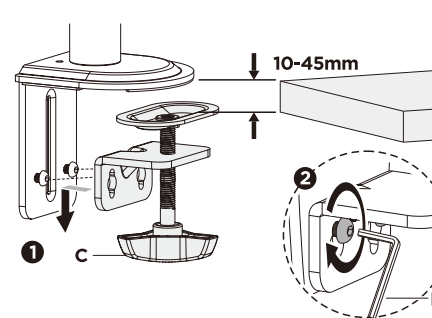

10-45mm


1

C

2

L

OR

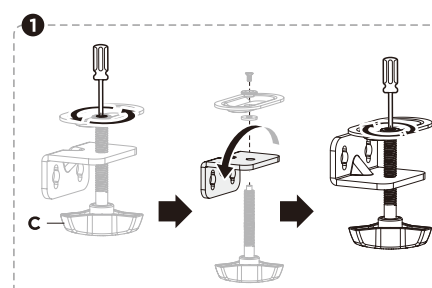

1

C

2

3

L

Desktop with Existing Through-Hole.


10-40mm

ø10-60mm

OR

10-40mm

ø 10mm (ø 3/8")

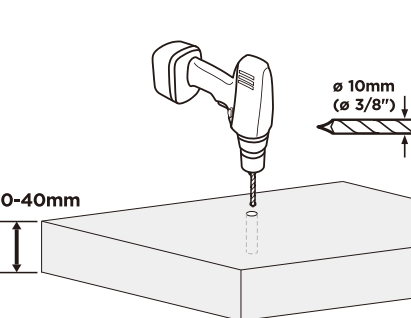


1

2

3

C2

C1

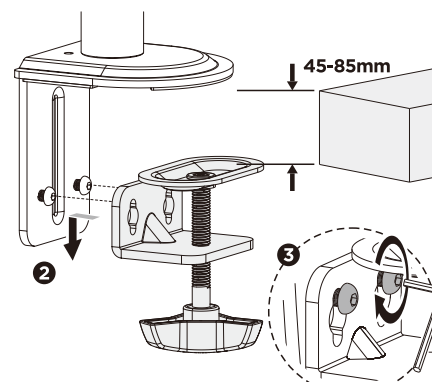


45-85mm

2

3

L

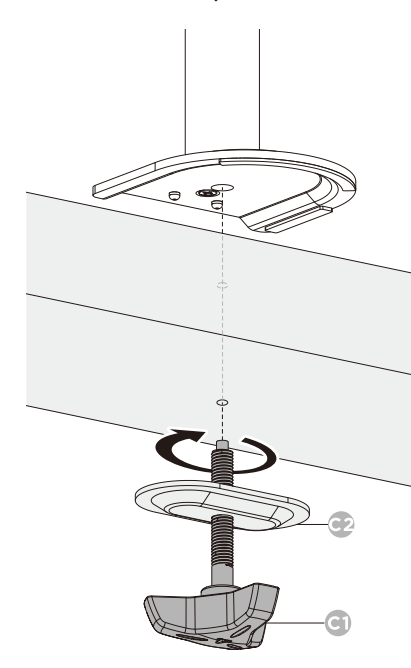


2

3

C2

C1


3

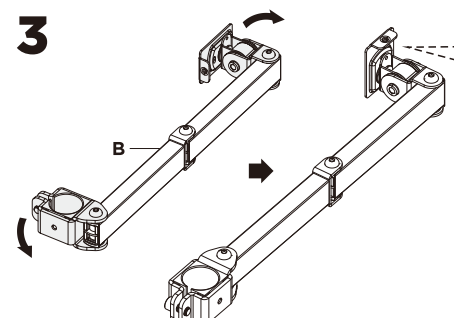

B

A

You will need to position the VESA Mounts to an UP position. To do that insert the VESA plate and rotate it to an upright position as shown. When complete, remove the VESA plate and proceed to the next step.

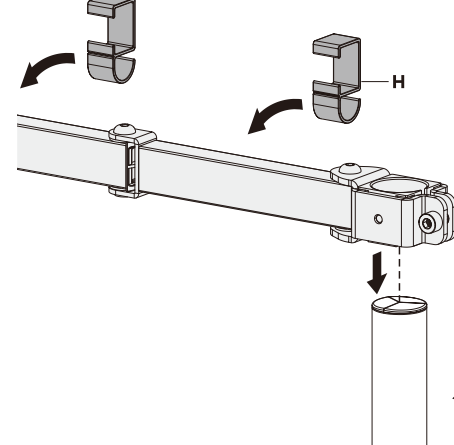


H

G

M

4

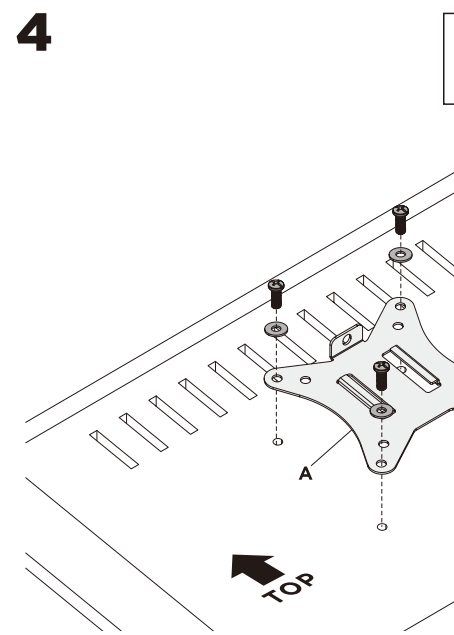

A

TOP

M-A

M-B


M-C

✓


✗

Too long

Too Short

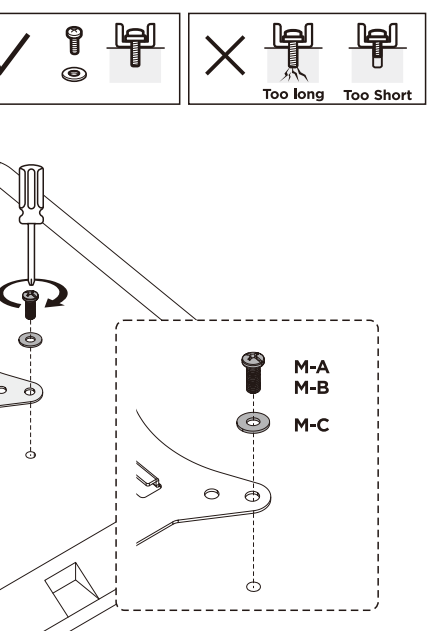

5

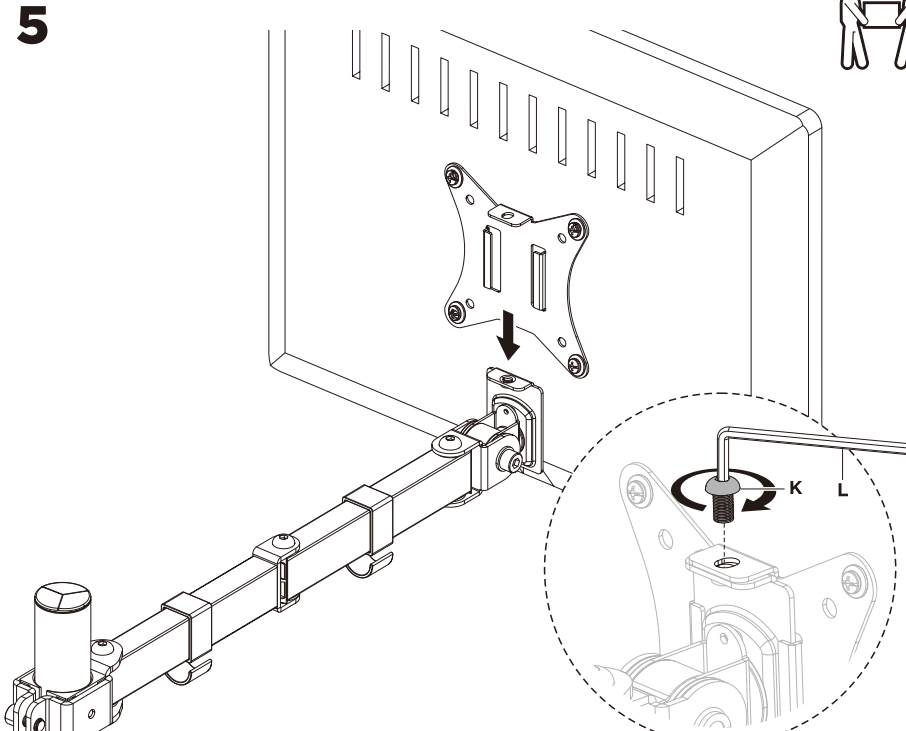

K

L